

TOOL HOLDER AND SALES COUNTERS

installation, use and maintenance instructions



* **BEFORE USING THE CABINET** check the floors, which must be in good condition and must have an appropriate consistency for the capacity of the cabinet. In the case of floors with slight unevenness, shim the cabinet and check the proper operation of the lock.

* **FLOOR OR WALL MOUNTING** is necessary in order to maintain the capacity of the drawers unchanged.

* **DURING TRANSIT WITH PALLET TRUCKS** the drawers must be closed and the front part must be facing the operator and the forks inserted completely under the cabinet.

* **THE OPENING AND CLOSING OF DRAWERS** must be done with only one drawer at a time.

* **MAKE SURE THE KEY IS IN OPENING POSITION BEFORE CLOSING THE DRAWERS.**

1

EXTRACTION OF DRAWERS.

Completely pull out the drawer and slightly raise the front part.


Slotted
longitudinal
separator



2

SEPARATORS.

After inserting them it is necessary to use the screws supplied (2 for the slotted ones and 1 for the smooth ones) to stiffen the bottom.

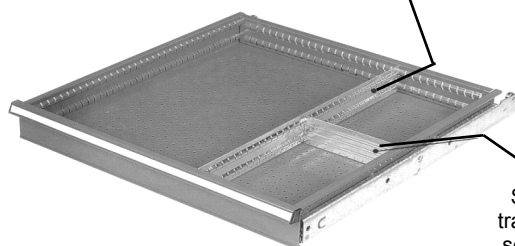


Smooth
transverse
separator

3


INSERTION/REPLACEMENT OF DRAWERS LABELS.

With a screwdriver push the plastic closing cap towards the outside to replace the labels.

Using pressure, fit the cap (right and left)

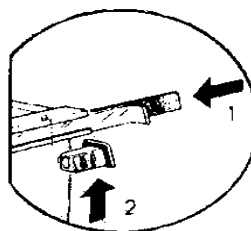

insertion


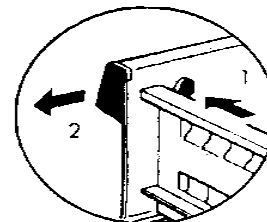


replacement

4

MOVING THE DRAWERS.

Remove the locking hooks "A" to free the guides "B"; reposition and lock them again with the hooks.

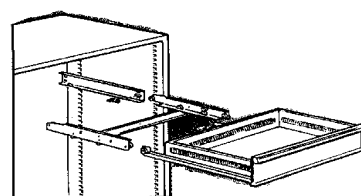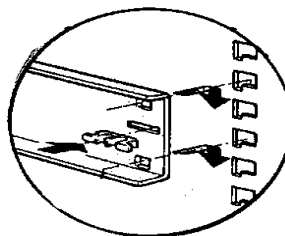


5

FITTING THE ADJUSTABLE SHELF.

Insert, at the same height, 4 hooks (G), two front and 2 rear, in the appropriate slots.


Place above the shelf (H).

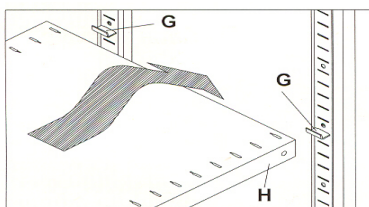

6

ANCHORING THE CABINET TO THE FLOOR.


After positioning the cabinet, mount it to the floor with 2 anchors of external \varnothing 8x75 (screw M8).

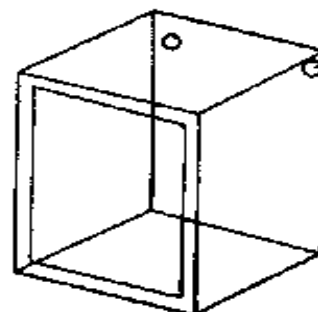

7

WALL MOUNTING.

After positioning the cabinet, remove the drawers. Drill 2 holes in correspondence with the existing ones in the top of the back of the cabinet and attach with appropriate anchors and washers.

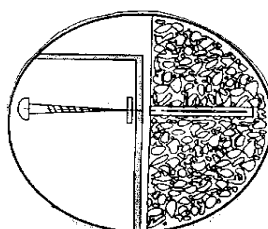


FIXING CABINETS SIDE/SIDE - BACK/ BACK - OVERLAPPING.

Using 4 screws M6x12, 8 washers and 4 nuts of 6, the cabinets can be joined to each other using the 4 existing holes.

For overlapping cabinets remove the possible base of the upper cabinet and after positioning them make 4 holes of diam.7 on the 4 sides of the base.

The capacity of 900 kg in case of overlapping cabinets must be considered for both units.

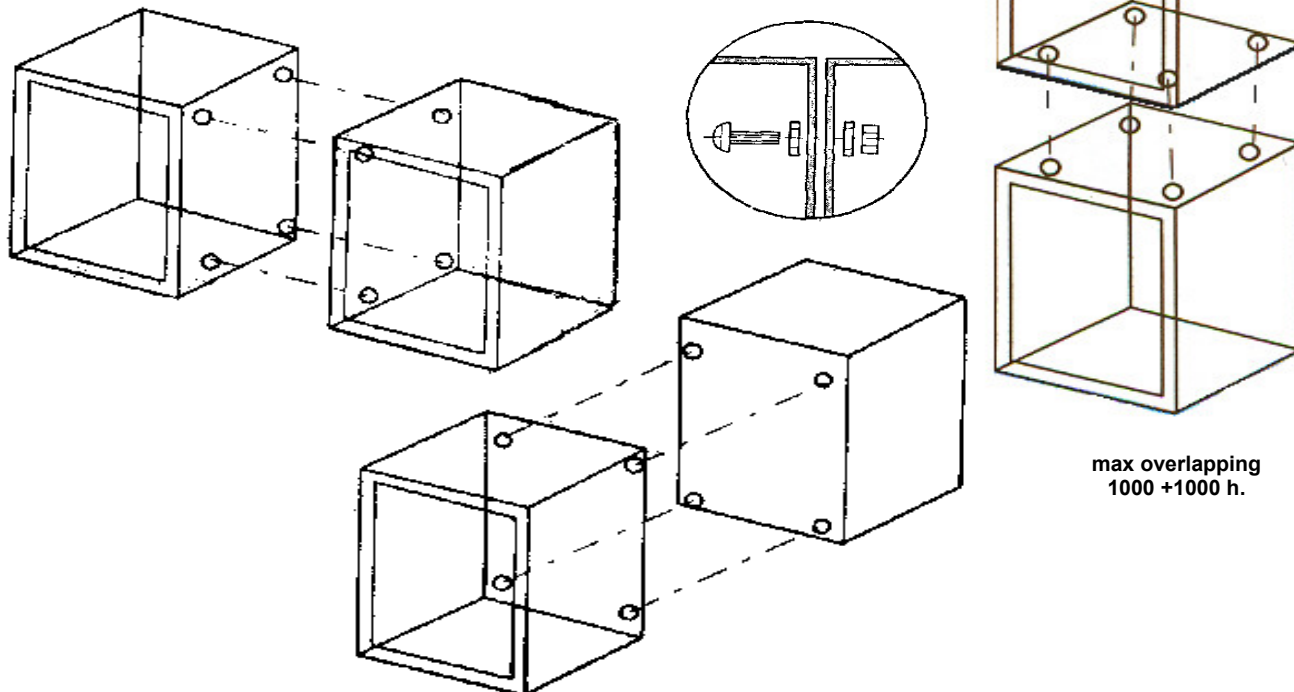

CABINETS MAXIMUM CAPACITY 900 KG.

UPPER SHELVES CAPACITY 80 KG.

DRAWERS CAPACITY valid only with floor mounting.

All capacities are valid for evenly distributed loads.

100% EXTENSION Useful dim.: 600x450 mm		
ART.	FRONT HEIGHT	CAPACITY (kg)
A965	75	70
A966	100	70
A967	150	70
A968	200	70


100% EXTENSION Useful dim.: 600x450 mm		
ART.	FRONT HEIGHT	CAPACITY (kg)
A970	75	50
A971	100	50
A972	150	50
A973	200	50

CABINET SHELF Useful dim.: 600x450 mm		
ART.	DESCR.	CAPACITY (kg)
A380	REGOL.	100

LOCK LOCKED



If the key turns freely or does not turn, to unlock the closing device of the drawers, you have to drill holes in the back with a tip of diam.10 in the position shown in the drawing; insert a screwdriver into the hole and, after making contact with the rod, strike it with a hammer to make it rotate and thus unlock the drawers.

CABINET WIDTH	REF. A (mm)	REF. B (mm)
717	390	150
1023	550	150

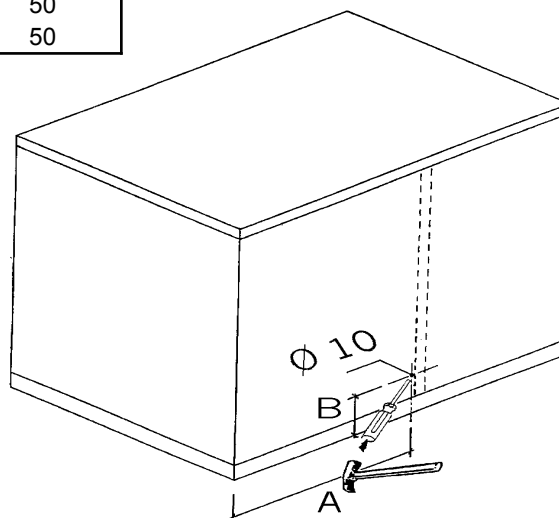

SALES COUNTERS.

It is possible to make benches for warehouses or storage depots for tools, using the cabinets and/or tool holders to be completed with the tops and the corners closed at 45 and 90°.

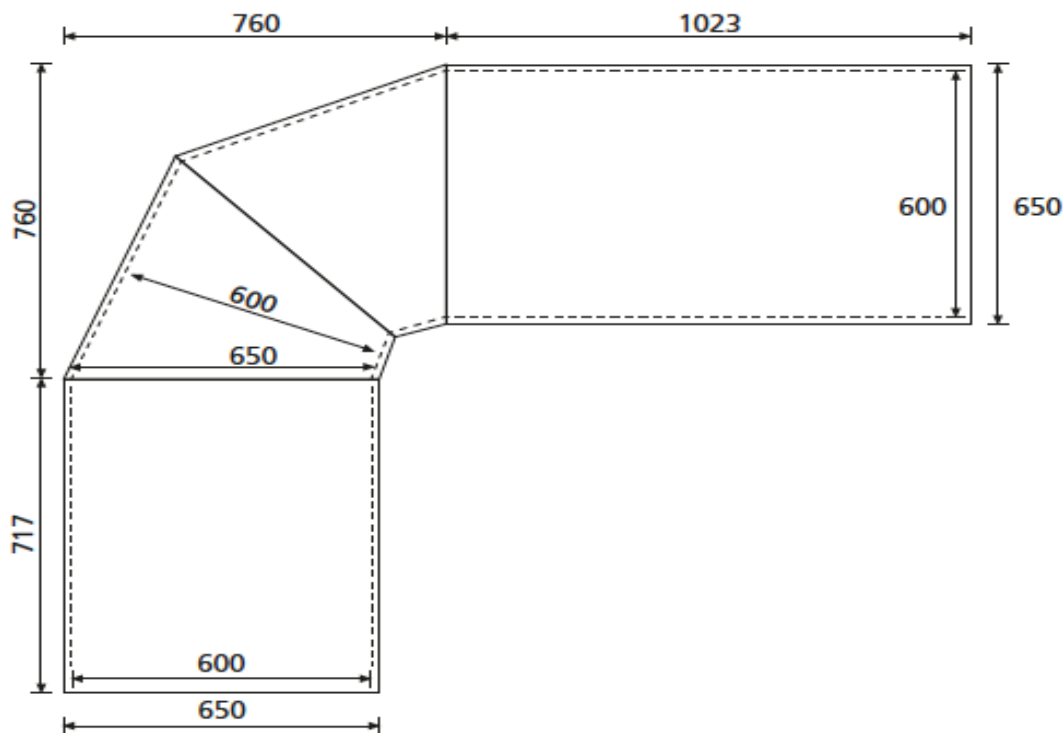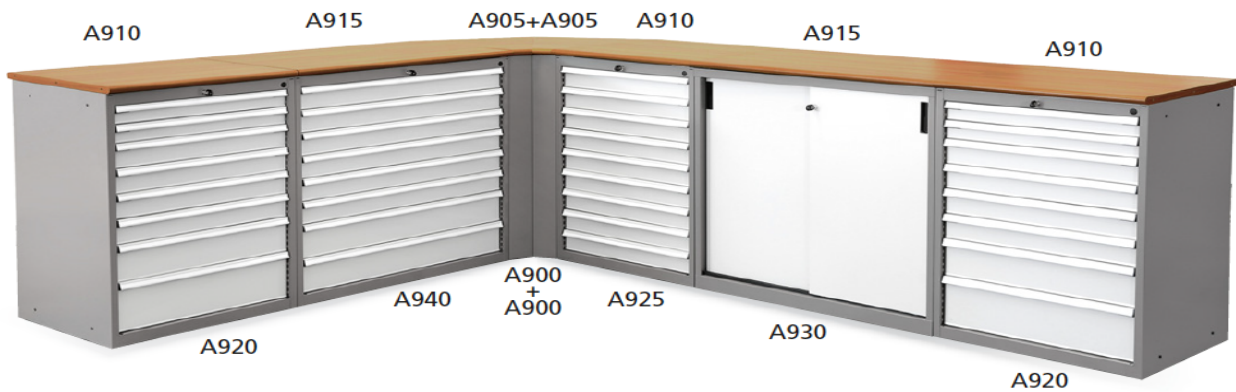

MAINTENANCE

Each time you use the cabinet, check that all its components are intact and kept in good condition.

If any parts are damaged, have them replaced.

Lubricate the bearings whenever it is deemed necessary in order to maintain a smooth sliding of the drawers.