

STOOLS

ART. S9860 - S9861

use and maintenance instructions



Structures made entirely in welded steel pipe of diam. mm.30 x 2 th.
Steps in aluminium of 200 x 22 mm.

PRECAUTIONS AND SAFETY RULES

- **Before using the stools** make sure that there are no damaged elements, flexion of uprights and steps, that the non-slip caps are intact and the stools are on flat ground and perfectly stable.

FOR CORRECT USE OF THE STOOLS THE FOLLOWING IS OBLIGATORY:

- The climbing and descent must always be made while looking at the stool; never turn your back to the stool.
- Pay full attention to high tension power lines (**maintain minimum distance of 5 m.**)
- Climbing shall be done one person at a time.
- **Capacity 150 kg.**
- Do not climb up with shoes that are untied, dirty with oil or grease, or with high heels.
- Do not add extension elements not provided for.
- Do not use on soft or uneven floors, also the ground must not be made slippery by water, oil or otherwise.

STOOLS

ARTICLE	NUMBER OF STEPS	TOTAL HEIGHT (mm)	DIMENSION AT THE BASE (mm)	WORKING HEIGHT (mm)
S9860	2	500	360/500 x 500	2500
S9861	3	780	550/780 x 770	2700

MAINTENANCE

Periodically check the condition of the materials and if the rubber feet are worn, replace them. Periodically check the condition of the platform.

The deposits of dirt caused by use can be removed with water or cleaning paste (do not use solvents that can dull the surfaces).

It is hereby declared that the ladder accompanied by this instruction sheet is constructed in accordance with the provisions of European standard UNI EN 14183 in line with the requirements of Leg. Decree. 81/08.

Certified TUV-GS (ref. No. R 60025968 01).