

WORKBENCHES ON WHEELS

installation, use and maintenance instructions



* **BEFORE USING THE BENCH** check the floors, which must be in good condition, without holes and accentuated unevenness and must have an appropriate consistency for the capacity of the bench.

* **DURING TRANSPORT** the drawers must be closed.

MOUNTING THE BENCH

1


Secure the wheel supports to the 2 lower cross bars of the undermount, each with 4 flanged screws TE 8x16.

2

The chest and the drawers unit have the bottom already set up with 4 threaded bushings for fixing to the undermount with 4 flanged screws TE 8x16.


3

Place the "L" handle between the side and the wooden top or between the drawers unit and the wooden top (to be attached with the same screws as the top).

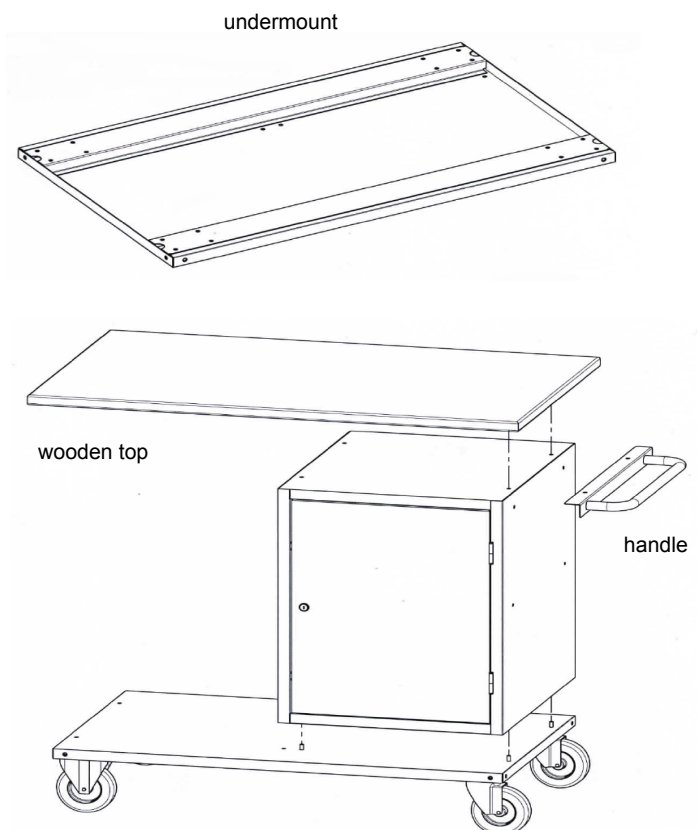

4


In the presence of only 1 drawers unit or chest it is necessary to attach, from the opposite side, the side to undermount, still with 4 flanged screws TE 8x16. **It is necessary to pull out the drawers from the drawers unit in correspondence to the attachment to be made.**

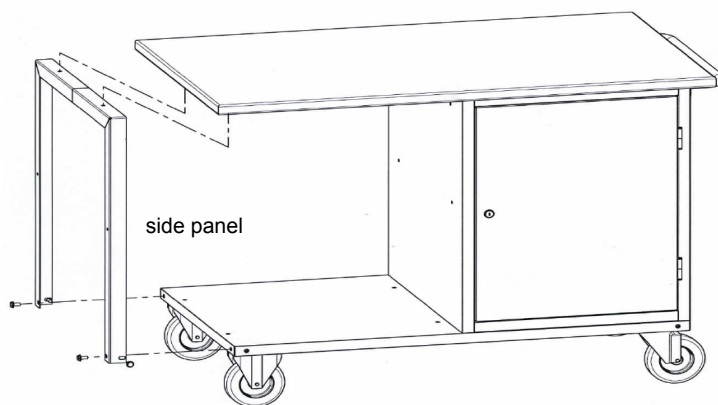

5

The intermediate shelf is fixed to the side and to the drawers unit with 4 oval head screws and square neck of 6x12 with nut.

The shelf can also be mounted upside down to be used as a tray.

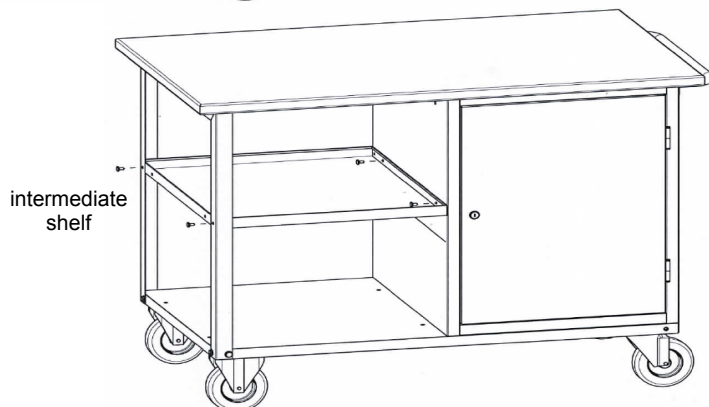

6

Complete the fixing of the structure with 4 TCEI screws 8x16 with a washer between the bench and the shelf made of birch plywood, already prepared with 4 threaded bushings.


Once the assembly is completed, check and tighten all screws.

USE OF DRAWERS UNIT

7

EXTRACTION OF DRAWERS.


Check that all the drawers are perfectly closed, completely remove the drawer and, slightly raising the front part, surpass the 1st and the 2nd stop. To facilitate extraction, close the key to unlock the bearing after the 2nd stop and reopen after insertion.

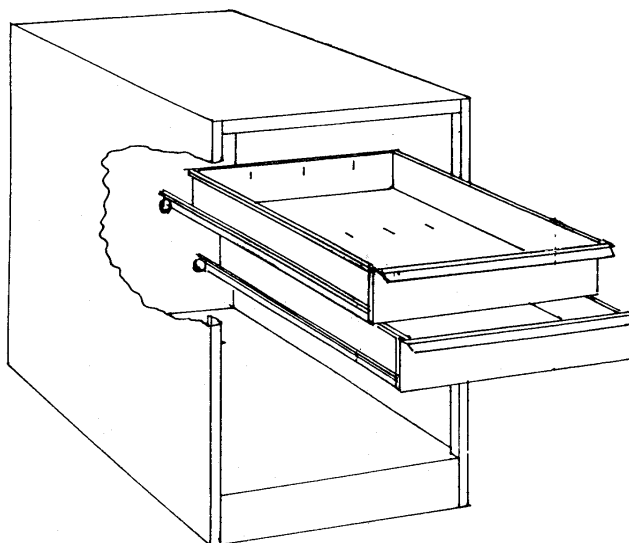

8

LOCKING THE SLOTTED SEPARATOR.

Insert the separator in the desired position and twist the tab through the bottom of the drawer.

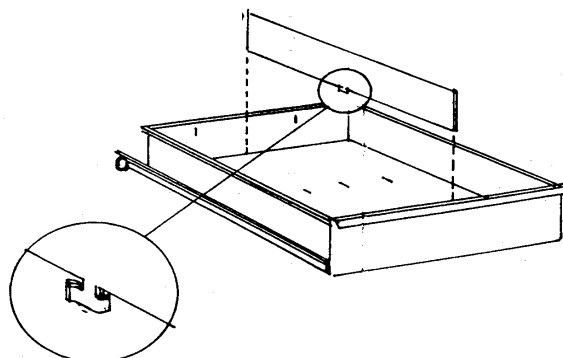

MAINTENANCE

Lubricate the bearings whenever it is deemed necessary in order to maintain a smooth sliding of the drawers. If any parts are damaged, have them replaced.