
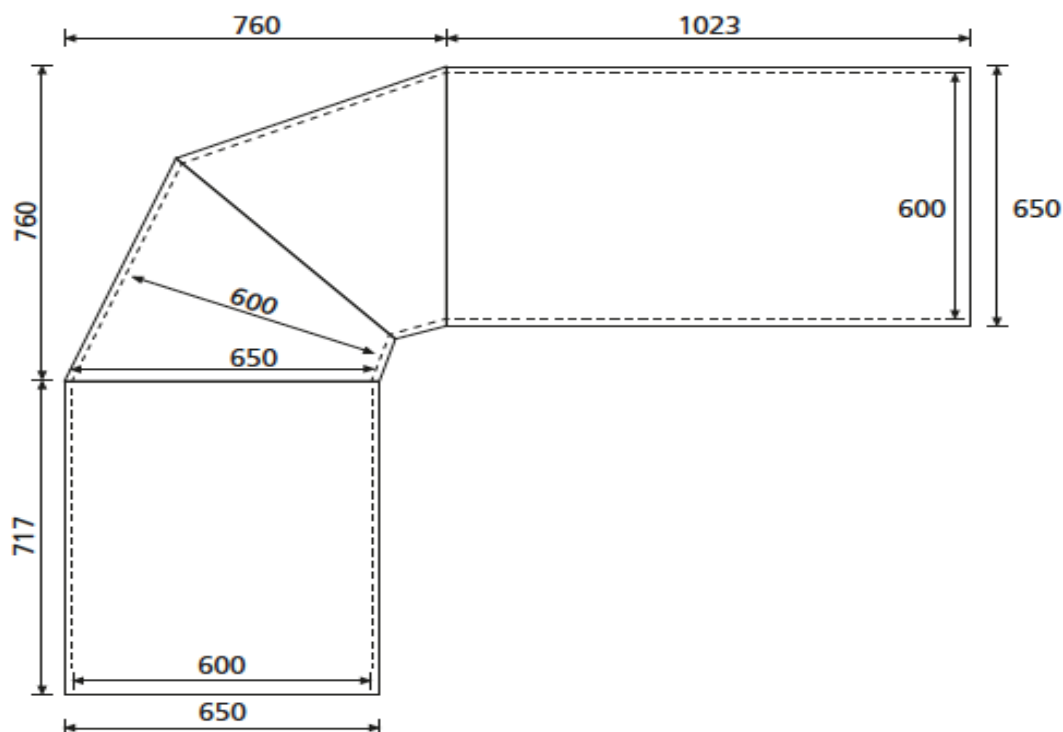


# BANCHI VENDITA

## installation and maintenance instructions

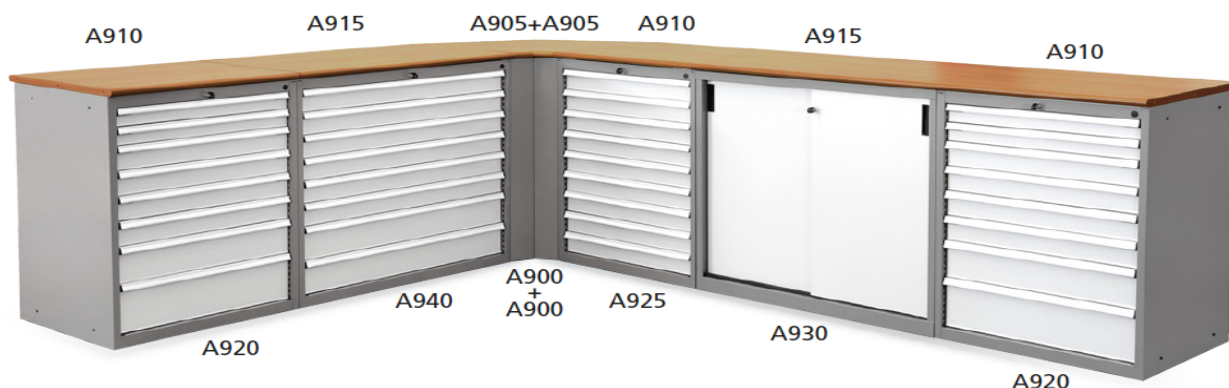

\* **BEFORE USING THE CABINETS** check the floors, which must be in good condition and must have an appropriate consistency for their capacities. In the case of floors with slight unevenness, shim the cabinets and check the proper operation of the locks.

\* **FLOOR MOUNTING** is necessary in order to maintain the capacity of the drawers unchanged.


\* **THE OPENING AND CLOSING OF DRAWERS** must be done with only one drawer at a time.

\* **MAKE SURE THE KEY IS IN OPENING POSITION BEFORE CLOSING THE DRAWERS.**

1

**FITTING THE CABINETS.**


In order to connect the cabinets it is necessary to remove the first 2/3 upper drawers to get a gap of approximately 250mm in height and to be able to easily perform the fixing for the bottom part, simply remove the bottom drawer. The drawers come off by carefully, slightly raising the front part. The lateral fixing uses 4 screws TE 6x12, 8 washers 6x18 and 4 nuts of 6. Provide all cabinets necessary for the online bench or bench with corner.

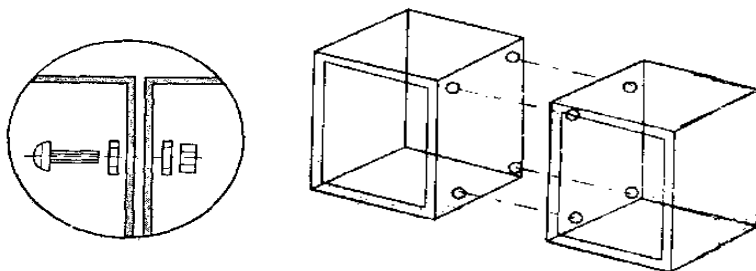

2

**FITTING THE CORNER.**



The corner can be at 45° or 90°. Every single element is supplied with 8 flanged screws TE 6x16, 8 square nuts in cage and 8 washers 6x24. The 45° corner is directly connected to the cabinets with all screws. To form the corner at 90° connect 2 elements at 45° from each other with 4 screws, nuts and washers. Another 8 screws will be used for connecting to the cabinets.

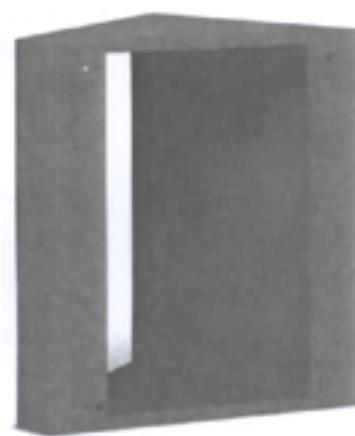

3

**TOPS ASSEMBLY.**

Prepare all the upper tops connecting them together with 2 wooden pegs of 50 mm diam.8.

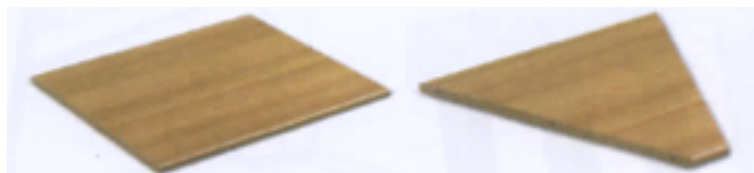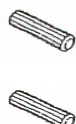

4

**TOPS FITTING.**

Position the complete top above the cabinets. Align in length and depth shimming the bases to have a perfect positioning. Secure each top over the ceilings of the cabinets that already have suitable holes in place (**excluding cabinet with doors**), with 4 self-tapping screws TE 6x20 and 4 washers 6x24, always from inside the unit. If the cabinet with door is in a central position it does not require fixing; on the contrary, if it is in end position, you must puncture the cabinet ceiling and fix as above or using double-sided adhesive.



5

**FITTING THE DRAWERS.**

Reposition the previously removed drawers and check the proper functioning of the anti-tipping device.

**MAINTENANCE**

Each time you use the cabinet, check that all its components are intact and kept in good condition. If any parts are damaged, have them replaced.

Lubricate the bearings whenever it is deemed necessary in order to maintain a smooth sliding of the drawers.