


BROOM HOLDER KIT

installation instructions

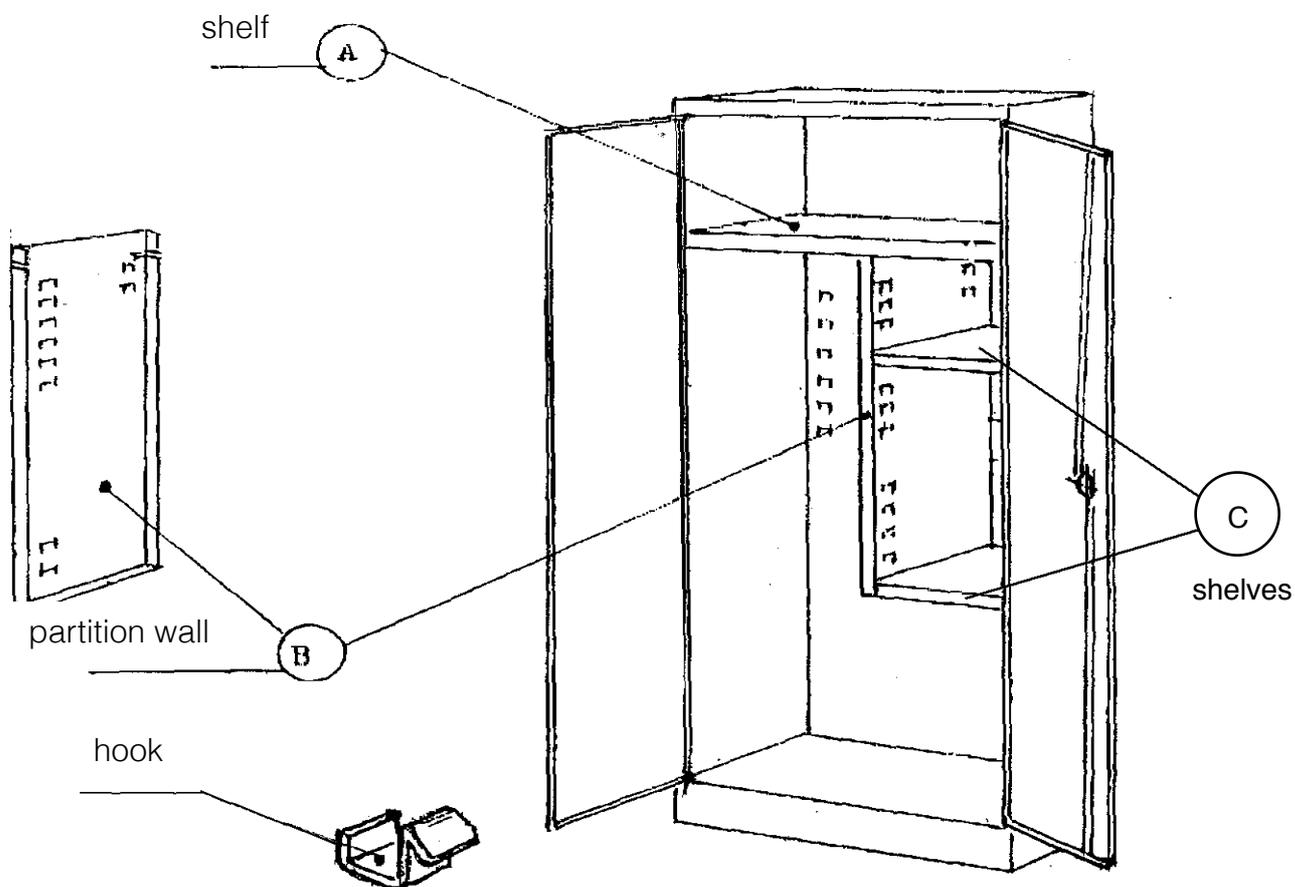

- 1 Fit the shelf **A** at the desired height using the tabs in the rear part and 2 hooks in the front.
- 2 Insert by rotating the partition wall **B** under shelf **A**.
- 3 Install the 2 shelves **C**, 1 all on the bottom and 1 at the desired height, with 1 hook in the front outer corner and with the tabs in the other 3 corners. Before inserting it use a screwdriver to gently force the flaps of the partition wall to facilitate attachment.