

WORKSHOP DETACHABLE CABINETS

installation instructions




Art.E369




Art.E371

INSTALLATION OF CABINETS

- 1** Partially tighten 4 screws in the bottom.
- 2** Engage the sides in the screws passing them through the eyelets.
- 3** Lightly tighten the screws with the supplied key passing through the outer hole in the side.
- 4** Snap the ceiling on the sides and tighten the 4 screws loosely.
- 5** Fit one back at a time in the rear part with the folds outwards and secure with plastic tacks (first insert the largest part in the hole and then lock with the tack inside using a hammer).

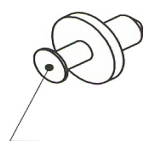

Press to lock

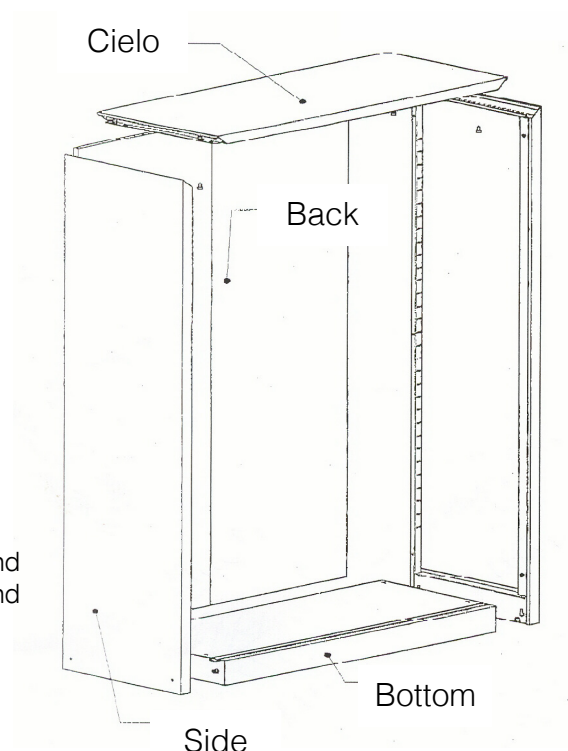

6 If there is a **partition wall**, insert the flaps of the rear part between the 2 backs and fix as explained in step "5".

7 **Fully tighten all screws.**

8 Make sure that the floor is perfectly level and, in case of slight unevenness, shim the cabinet.

9 Position the left door at the centre, with the bearings on top, and twist to lock it in position in the most internal guide rail of the ceiling. Verticalize the door to insert it into the base groove. Repeat with the right door that is inserted in the outermost guides.

10 Lock the doors with 4 pressure inserts into the dedicated slots.

11 Engage the lock in the hole of the right door and secure it from the inside with the clip. **Check that the lock is working perfectly.**

Partition wall
(only for
cabinets of width
1500-1800)

part to be
engaged
between the
backs

