


# WOODEN BENCHES / LOCKERS + BENCHES

## installation instructions




### FITTING THE BENCH

- 1 Place the staves on a surface with the flat side facing up, and after inserting the oval head screws 8x35 in the holes (8 in the bench of 1000 and 12 in the bench of 2000). Insert the legs and tighten the nuts.

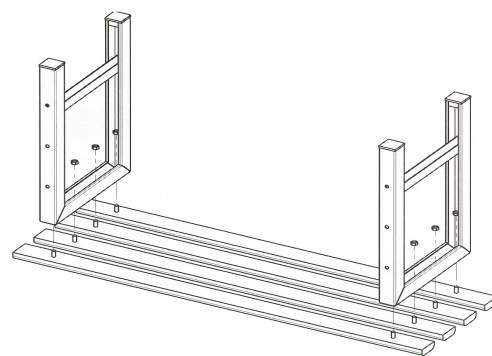


- 2 Turn over the bench and secure the 2 cross bars in the outer holes of the legs with 4 flanged screws TE 8x16 with nut.

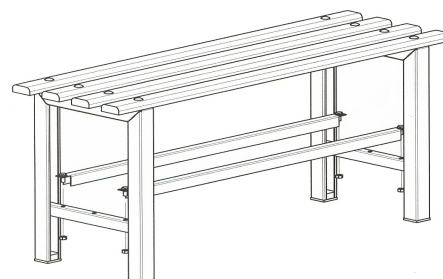

## ASSEMBLY OF BENCH WITH BACKREST



- 3** Mount the bench as in step "1" and "2".
- 4** Attach the rods to the bench with 2 screws TCEI 8x16 (2 rods for the bench of 1000 and 3 for the bench of 2000).

- 5** Insert the shelf in the rods and secure it with 2 or 3 screws 5x50 with nut.

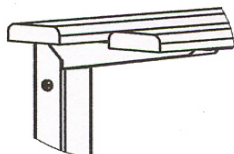

- 6** Attach the stave of the backrest and the hanger with countersunk head Allen screws 8x30 (2 for the bench of 1000 and 3 for the bench of 2000).

- 7** Supplied with the bench there are 2 or 3 plates, to be used flat for the fixing of double-sided benches or to be bent for wall mounting.

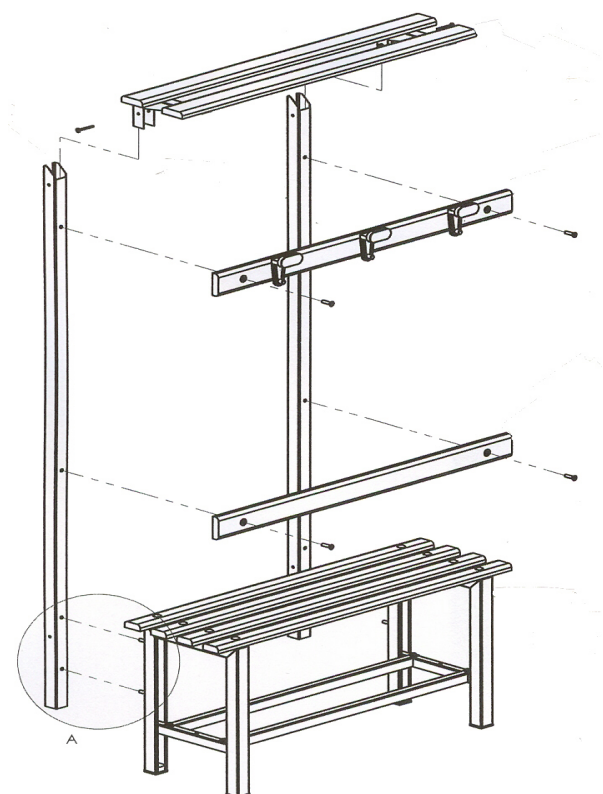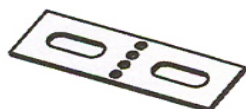


## ASSEMBLY OF BENCH WITH LOCKER

- 8** Place the staves on a surface with the flat side facing up, and after inserting the 8 oval head screws 8x35 in the holes. Insert the legs from the side of the 4 holes and tighten the nuts.

- 9** Turn over the bench and secure the 3 cross bars (2 under the staves and 1 in the back) with 6 flanged screws TE 8x16 with nut.

- 10** Fix the 2 lateral corners to the legs, each with 2 expansion bolts (insert the largest part in the holes and block with the bolt).

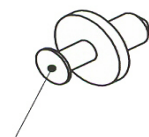

Crush to lock

- 11** Place the locker on the support and lock it with 4 nails.

