

CONTAINER HOLDING TROLLEY

installation instructions



MOUNTING SEQUENCE

1 MOUNTING THE WHEELS

Attach the wheels at the base, each with 4 screws TE 8x16, nut and washer 8x24.



ART.1=n.16



ART.2=n.16



ART.3=n.16




ART.9=n.1



ART.10=n.2



ART.11=n.1

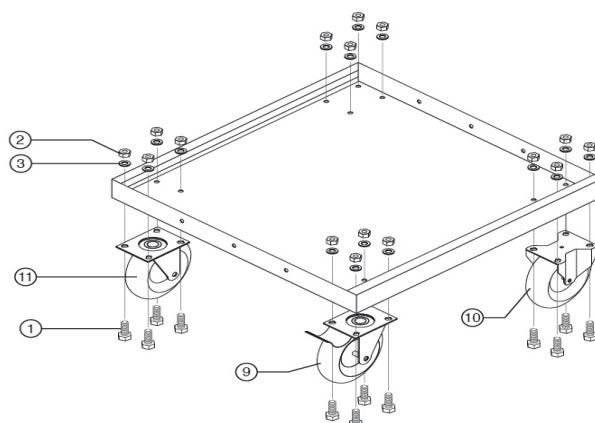

2 MOUNTING THE SIDES

Connect the 2 sides at the base, each with 3 screws 8x20, nut and washer 8x16.




ART.1=n.6



ART.2=n.6




ART.3=n.6

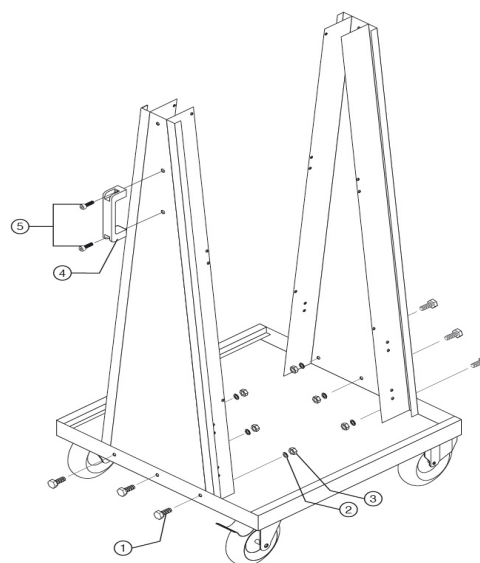

3

FITTING THE PANELS




Begin with the fitting of 2 panels at the bottom part of the sides, securing each with 4 screws 6x12, square snap-in nuts and grover washers 6x12. Continue with the 2 top panels that are connected to both the sides and the lower panels.

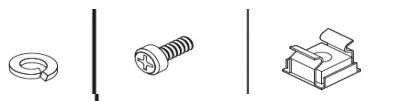

ART.6=n.16

ART.7=n.16


ART.8=n.16

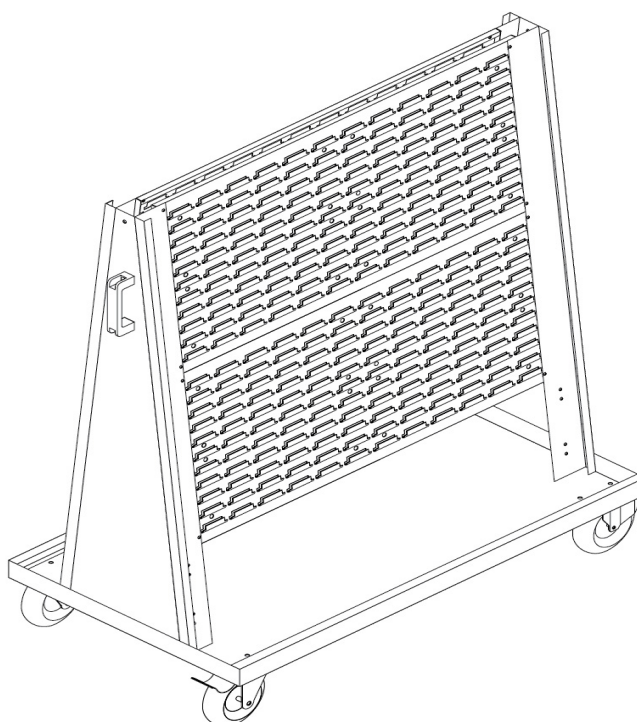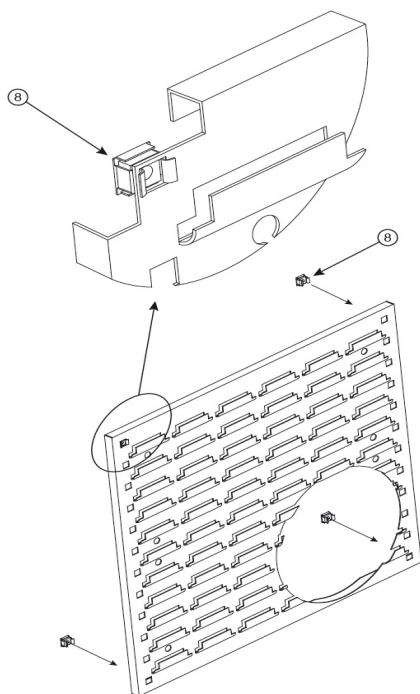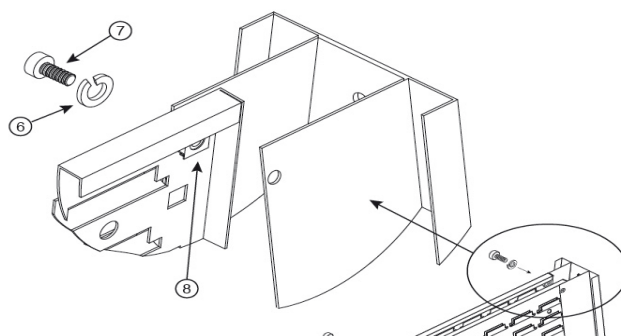

4

FITTING THE HANDLE

It must be fixed in the side that has 2 swivel wheels 1 of which is braking and screwed with 2 socket head screws 8x25.

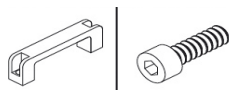

ART.4=n.1

ART.5=n.2

