


DRAWERS UNIT HOLDER TROLLEY


installation instructions

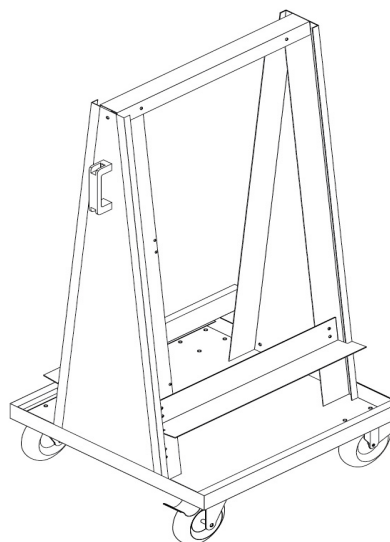

MOUNTING SEQUENCE

1 MOUNTING THE WHEELS

Attach the wheels at the base, each with 4 screws TE 8x16, nut and washer 8x24.



ART.1=n.16



ART.2=n.16



ART.3=n.16




ART.9=n.1



ART.10=n.2



ART.11=n.1

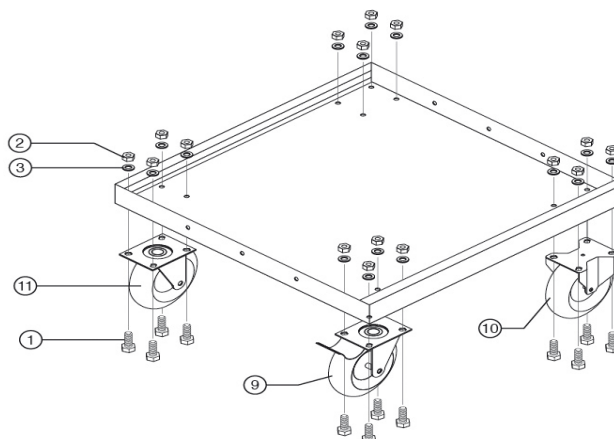

2 MOUNTING THE SIDES

Connect the 2 sides at the base, each with 3 screws 8x20, nut and washer 8x16.




ART.1=n.6



ART.2=n.6



ART.3=n.6

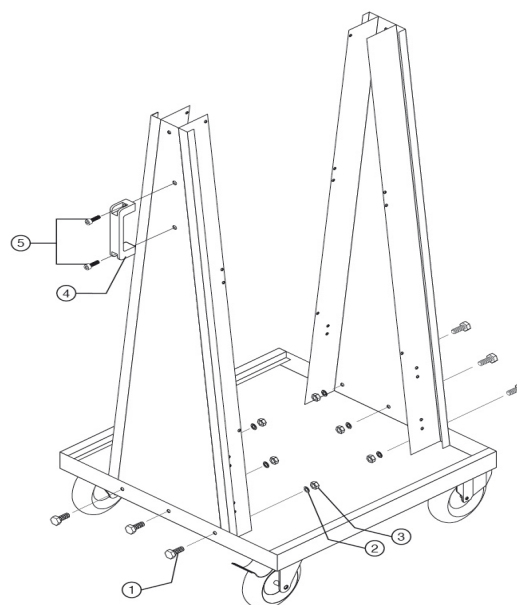

3

MOUNTING THE ANGLE IRONS

Start fitting the "C" profile which is connected to the sides in the top part and secured with 2+2 cylindrical head screws 6x12, grover nuts and washers 6x12. Continue with the 2 angle irons in the lower part of the sides, fixing them in the same manner.




ART.6=n.12



ART.7=n.12




ART.8=n.12

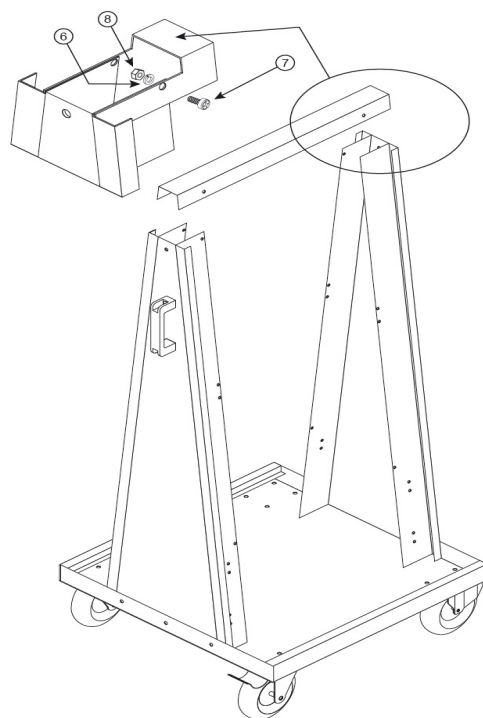

4

FITTING THE HANDLE

It must be fixed in the side that has 2 swivel wheels 1 of which is braking and screwed with 2 socket head screws 8x25.



ART.4=n.1



ART.5=n.2

