

STAINLESS STEEL TOOL HOLDER TROLLEYS

installation instructions



Made of austenitic stainless steel first grade AISI 304 (EN 1.4301) with moulded tray shelves.

Ø tube frame 25mm with 4 shank swivel wheels Ø 125 mm.

125 in dark grey thermoplastic rubber and nucleus in light grey polymer.

Capacity 80 kg.


Suitable for the food, pharmaceutical and chemical sectors.

1

FITTING THE TROLLEYS.


Place the shelf on the ground and bring the handle closer with the wheels.

Tighten with the screws TE 8x30, nut and washer, loosely.

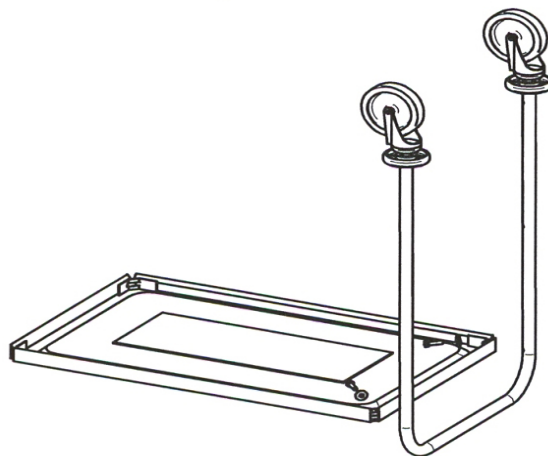


2

Position the lower tray in the same way, as well as the central tray if present.

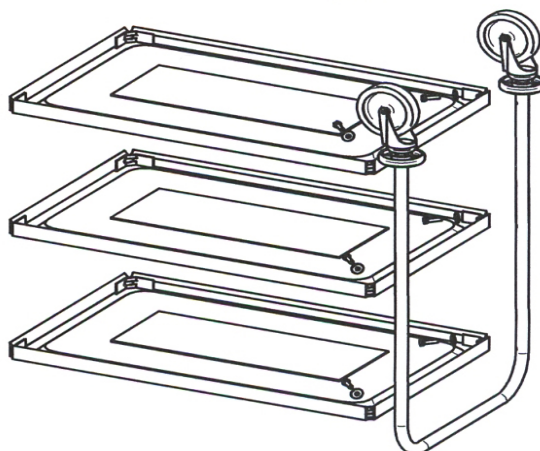

3

Bring the 2nd handle closer and screw the trays starting with the one on the ground.

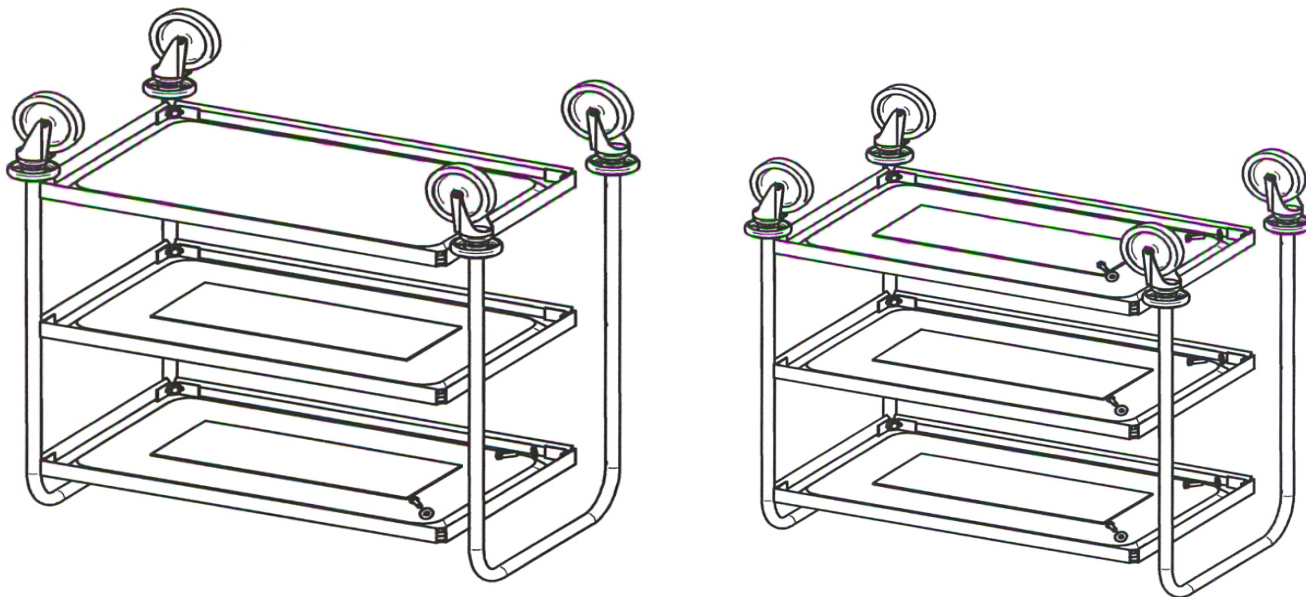

4

Check that **all joints fit snugly**, then finally tighten all bolts.

DETACHABLE TROLLEYS		
ART.	SIZE	SHELVES
	L x D x H (mm)	
C200	890 x 590 x 950	2
C201	1090 x 590 x 950	2
C205	890 x 590 x 950	3
C206	1090 x 590 x 950	3

USE AND MAINTENANCE INSTRUCTIONS

- * Do not walk on uneven grounds to prevent damage to the trolley.
- * Do not leave the trolley stopped on sloping ground.
- * Before each use check that the wheels are not blocked by dust or otherwise. If it is the case, thoroughly clean, removing the impurities.